



# **NXTi 3P-1P Online UPS**

10kVA Model

User & Installation Manual

**Table of Contents**

**Safety and EMC Instructions.....3**

    Transportation and Storage.....3

    Preparation.....3

    Installation.....3

    Standards.....4

**Installation and Operation.....4**

    Unpacking and Inspection.....4

    Rear Panel View.....5

    Single UPS Installation.....6

    UPS Installation for Parallel System.....7

    Software Installation.....8

**Operations.....9**

    Button Operation.....9

    LED Indicators and LCD Panel.....9

    Audible Alarm.....11

    Single UPS Operation.....12

    Parallel Operation.....15

    Abbreviation Meaning in LCD Display.....16

    LCD Setting.....18

    Operating Mode/Status Description.....24

    Fault Code.....29

    Warning Indicator.....29

    Warning Code.....30

**Troubleshooting.....30**

**Storage and Maintenance.....32**

    Storage.....32

    Maintenance.....32

**Specifications.....33**

## Safety and EMC Instructions

Please read carefully the following user manual and the safety instructions before installing the unit or using the unit!

### *Transportation and Storage*

- Please transport the UPS system only in the original package to protect against shock and impact. The UPS must be stored in the room where it is ventilated and dry.

### *Preparation*

- Condensation may occur if the UPS system is moved directly from cold to warm environment. The UPS system must be absolutely dry before being installed. Please allow at least two hours for the UPS system to acclimate the environment.
- Do not install the UPS system near water or in moist environments.
- Do not install the UPS system where it would be exposed to direct sunlight or nearby heater.
- Do not block ventilation holes in the UPS housing.

### *Installation*

- Do not connect appliances or devices which would overload the UPS (e.g. big motor-type equipment)) to the UPS output sockets or terminal.
- Place cables in such a way that no one can step on or trip over them.
- Do not block air vents in the housing of UPS. The UPS must be installed in a location with good ventilation. Ensure enough space on each side for ventilation.
- UPS has provided earthed terminal, in the final installed system configuration, equi-potential earth bonding to the external UPS battery cabinets.
- The UPS can be installed only by qualified maintenance personnel.
- An appropriate disconnect device as short-circuit backup protection should be provided in the building wiring installation.
- An integral single emergency switching device which prevents further supply to the load by the UPS in any mode of operation should be provided in the building wiring installation.
- Connect the earth before connecting to the building wiring terminal.
- Installation and Wiring must be performed in accordance with the local electrical laws and regulations.

### *Operation*

- Do not disconnect the earth conductor cable on the UPS or the building wiring terminals in any time since this would cancel the protective earth of the UPS system and of all connected loads.
- The UPS system features its own, internal current source (batteries). The UPS output sockets or output terminal blocks may be electrically live even if the UPS system is not connected to the building wiring outlet.
- In order to fully disconnect the UPS system, first press the "OFF" button and then disconnect the mains
- Ensure that no liquid or other foreign objects can enter into the UPS system.
- The UPS can be operated by any individuals with no previous experience.

## Standards

<b>* Safety</b>	
IEC/EN 62040-1	
<b>* EMI</b>	
Conducted Emission.....:IEC/EN 62040-2	Category C3
Radiated Emission.....:IEC/EN 62040-2	Category C3
<b>*EMS</b>	
ESD.....:IEC/EN 61000-4-2	Level 4
RS.....:IEC/EN 61000-4-3	Level 3
EFT.....:IEC/EN 61000-4-4	Level 4
SURGE.....:IEC/EN 61000-4-5	Level 4
CS.....:IEC/EN 61000-4-6	Level 3
Power-frequency Magnetic field.....:IEC/EN 61000-4-8	Level 4
Low Frequency Signals.....:IEC/EN 61000-2-2	
<b>Warning:</b> This is a product for commercial and industrial application in the second environment-installation restrictions or additional measures may be needed to prevent disturbances.	

## Installation and Operation

There are two different types of online UPS: standard and long-run models. Please refer to the following model table.

Model	Type	Model	Type
NXTi-10K 3-1	Standard model	NXTi-10KL 3-1	Long-run model

We also offer optional parallel function for these two types by request. The UPS with parallel function is called as “Parallel model”. We have described detailed installation and operation of Parallel Model in the following chapter.


## Unpacking and Inspection

Unpack the package and check the package contents. The shipping package contains:


- One UPS
- One user manual
- One monitoring software CD
- One RS-232 cable (option)
- One USB cable
- One EPO plug
- One parallel cable (only available for parallel model)
- One share current cable (only available for parallel model)
- One battery cable (only available for 10KL)

**NOTE:** Before installation, please inspect the unit. Be sure that nothing inside the package is damaged during transportation. Do not turn on the unit and notify the carrier and dealer immediately if there is any damage or lacking of some parts. Please keep the original package in a safe place for future use.

**Rear Panel View**

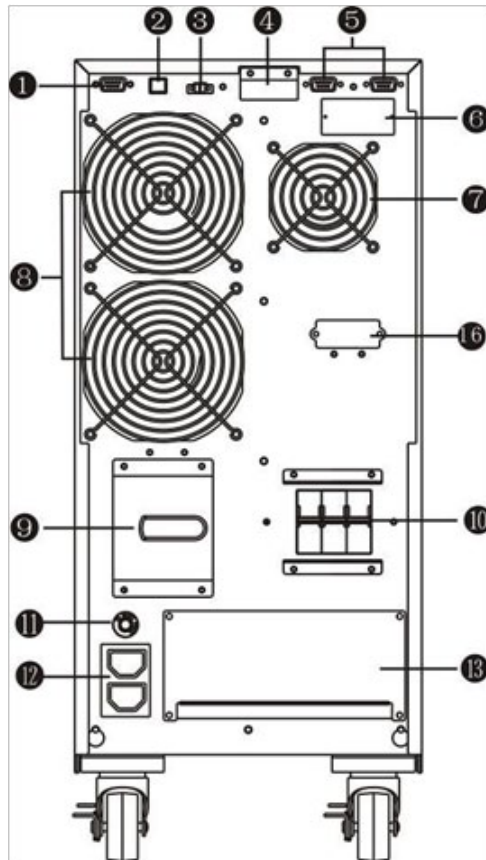

**10K/10KL Rear Panel**

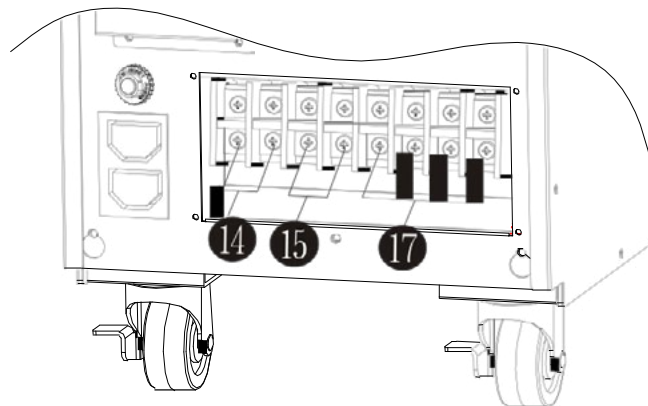

**10K/10KL Input/Output Terminal**

1. RS-232 communication port
2. USB communication port
3. Emergency power off function connector (EPO connector)
4. Share current port (only available for parallel model)
5. Parallel port (only available for parallel model)
6. Intelligent slot
7. Charger fan
8. Power stage fan
9. Maintenance bypass switch

10. Input circuit breaker
11. Output circuit breaker for receptacles
12. Output receptacles: connect to mission-critical loads
13. Input/Output terminal (Refer to Diagram 4, 5, 6 and 7 for the details)
14. Output terminal: connect to mission-critical loads
15. Programmable output terminal: connect to non-critical loads
16. External battery terminal (only available for Long-run model)
17. Utility input terminal
18. Grounding terminal

### Single UPS Installation

Installation and wiring must be performed in accordance with the local electric laws/regulations and execute the following instructions by professional personnel.


1. Make sure the mains wire and breakers in the building are enough for the rated capacity of UPS to avoid the hazards of electric shock or fire.  
**NOTE:** Do not use the wall receptacle as the input power source for the UPS, as its rated current is less than the UPS's maximum input current. Otherwise the receptacle may be burned and destroyed.
2. Switch off the mains switch in the building before installation.
3. Turn off all the connected devices before connecting to the UPS.
4. Prepare wires based on the following table:

Model	Wiring spec (AWG)			
	Input	Output	Battery	Ground
10K	8	8		8
10KL	8	8	8	8

**NOTE 1:** The cable for 10K/10KL should be able to withstand over 63A current. It is recommended to use 8AWG or thicker wire for safety and efficiency.

**NOTE 2:** The selections for color of wires should be followed by the local electrical laws and regulations.

5. Remove the terminal block cover on the rear panel of UPS. Then connect the wires according to the following terminal block diagrams: (Connect the earth wire first when making wire connection. Disconnect the earth wire last when making wire disconnection!)

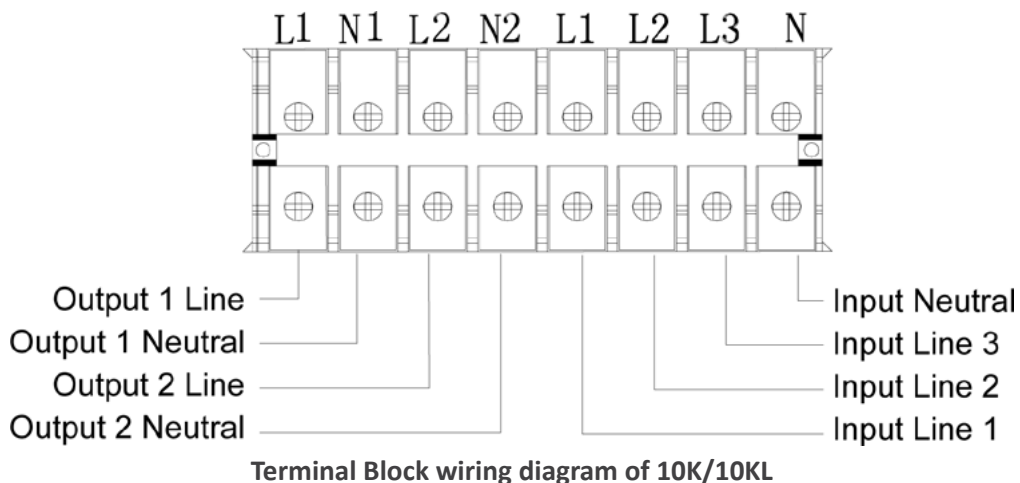

**NOTE 1:** Make sure that the wires are connected tightly with the terminals.

**NOTE 2:** There are two kinds of outputs: output terminal/outlets and programmable terminal. Please connect non-critical devices to the programmable terminal and critical devices to the output terminal/outlets. During power failure, you may extend the backup time to critical devices by setting shorter backup time for non-critical devices.

**NOTE 3:** Please install the output breaker between the output terminal and the load, and the breaker should be qualified with leakage current protective function if necessary.

6. Insert the EPO plug into the EPO slot on the rear panel.
7. Put the terminal block cover back to the rear panel of the UPS.

**Warning: (Only for standard model)**

- Make sure the UPS is not turned on before installation. The UPS should not be turned on during wiring connection.
- Do not try to modify the standard model to the long-run model. Particularly, do not try to connect the standard internal battery to the external battery. The battery type and voltage may be different. If you connect them together, it may cause the hazard of electric shock or fire!

**Warning: (Only for long-run model)**

Make sure a DC breaker or other protection device between UPS and external battery pack is installed. If not, please install it carefully. Switch off the battery breaker before installation.


**NOTE:** Set the battery pack breaker in "OFF" position and then install the battery pack.

- Pay highly attention to the rated battery voltage marked on the rear panel. If you want to change the numbers of the battery pack, please make sure you modify the setting simultaneously. The connection with wrong battery voltage may cause permanent damage of the UPS. Make sure the voltage of the battery pack is correct
- Pay highly attention to the polarity marking on external battery terminal block, and make sure the correct battery polarity is connected. Wrong connection may cause permanent damage of the UPS.
- Make sure the protective earth ground wiring is correct. The wire current spec, color, position, connection and conductance reliability should be checked carefully.
- Make sure the utility input & output wiring is correct. The wire current spec, color, position, connection and conductance reliability should be checked carefully. Make sure the L/N site is correct, not reverse and short-circuited.

## ***UPS Installation for Parallel System***

If the UPS is only available for single operation, you may skip this section to the next.

1. Install and wire the UPSs according to the Single UPS Installation section.
2. Connect the output wires of each UPS to an output breaker.
3. Connect all output breakers to a major output breaker. Then this major output breaker will directly connect to the loads.
4. Each UPS is connected to an independent battery pack.  
**NOTE:** The parallel system cannot use one battery pack. Otherwise, it will cause system permanent failure.
5. Refer to the following wiring diagram:

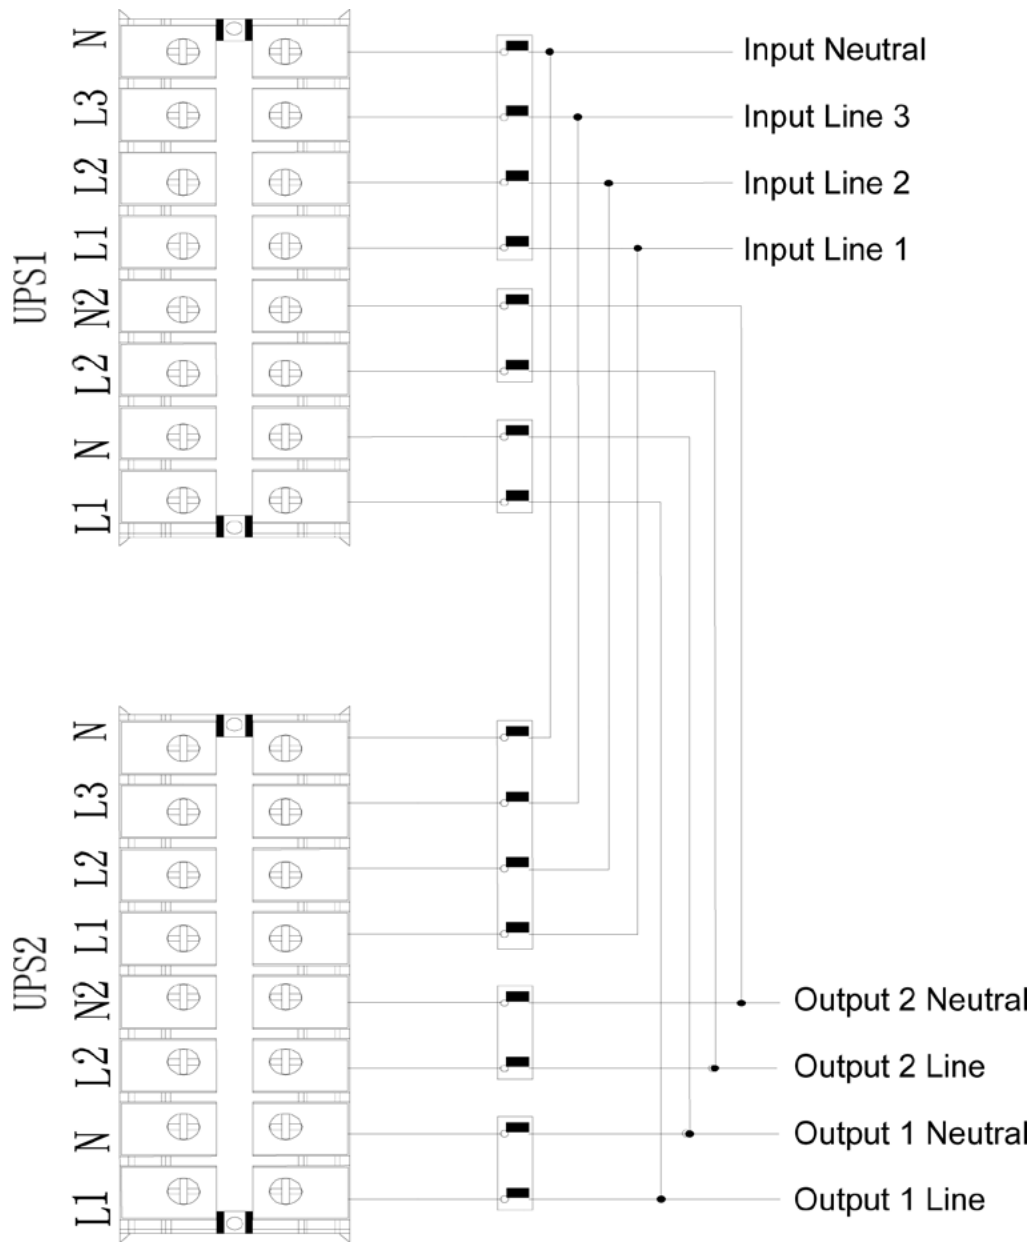

Wiring diagram of parallel system for 10K/10KL

### Software Installation

For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown.




## Operations

### Button Operation

Button	Function
ON/Enter Button	<ul style="list-style-type: none"> <li>Turn on the UPS: Press and hold the button more than 0.5s to turn on the UPS.</li> <li>Enter Key: Press this button to confirm the selection in setting menu.</li> </ul>
OFF/ESC Button	<ul style="list-style-type: none"> <li>Turn off the UPS: Press and hold the button more than 0.5s to turn off the UPS.</li> <li>Esc key: Press this button to return to last menu in setting menu.</li> </ul>
Test/Up Button	<ul style="list-style-type: none"> <li>Battery test: Press and hold the button more than 0.5s to test the battery while in AC mode and CVCF* mode.</li> <li>UP key: Press this button to display next selection in setting menu.</li> </ul>
Mute/Down Button	<ul style="list-style-type: none"> <li>Mute the alarm: Press and hold the button more than 0.5s to mute the buzzer.</li> <li>Down key: Press this button to display previous selection in setting menu.</li> </ul>
Test/Up + Mute/Down Button	<ul style="list-style-type: none"> <li>Press and hold the two buttons simultaneous more than 1s to enter/escape the setting menu.</li> </ul>

\* CVCF means Constant Voltage and Constant Frequency.

### LED Indicators and LCD Panel

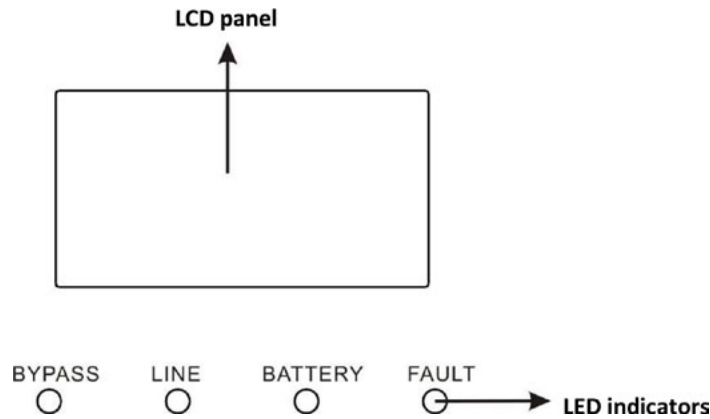


#### LED Indicators

There are 4 LEDs on front panel to show the UPS working status:







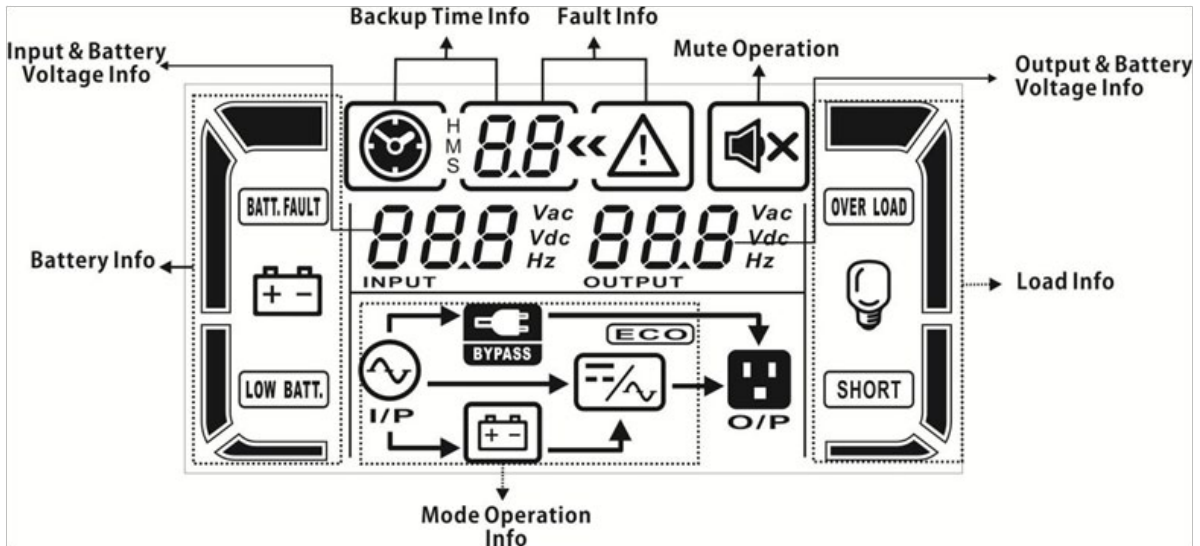


Mode	Bypass	Line	Battery	Fault
UPS On	●	●	●	●
No Output mode	○	○	○	○
Bypass mode	●	○	○	○
AC mode	○	●	○	○
Battery mode	○	○	●	○
CVCF mode	○	●	○	○
Battery Test	●	●	●	○
ECO mode	●	●	○	○
Fault	○	○	○	●

 Note: ● means LED is lighting, and ○ means LED is faded.

LCD Panel

 

Display	Function
<b>Backup time information</b>	
	Indicates the battery discharge time in numbers H: hours, M: minutes, S: seconds
<b>Fault information</b>	
	Indicates that the warning and fault occurs.
	Indicates the fault codes
<b>Mute operation</b>	
	Indicates that the UPS alarm is disabled.
<b>Output &amp; Battery voltage information</b>	
	Indicates the output voltage, frequency or battery voltage. Vac: output voltage, Vdc: battery voltage, Hz: frequency
<b>Load information</b>	
	Indicates the load level by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates overload.
	Indicates the load or the output is short.
<b>Mode operation information</b>	
	Indicates the UPS connects to the mains.

	Indicates the battery is working.
	Indicates the bypass circuit is working.
	Indicates the ECO mode is enabled.
	Indicates the Inverter circuit is working.
	Indicates the output is working.
<b>Battery information</b>	
	Indicates the Battery capacity by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates the battery is not connected.
	Indicates low battery level and low battery voltage.
<b>Input &amp; Battery voltage information</b>	
	Indicates the input voltage or frequency or battery voltage. Vac: Input voltage, Vdc: battery voltage, Hz: input frequency

**Audible Alarm**

Description	Buzzer status	Muted
<b>UPS status</b>		
Bypass mode	Beeping once every 2 minutes	Yes
Battery mode	Beeping once every 4 seconds	
Fault mode	Beeping continuously	
<b>Warning</b>		

Overload	Beeping twice every second	No
Low battery	Beeping once every second	
Battery unconnected		
Over charge		
EPO enable		
Fan failure		
Over temperature		
Charger failure		
L1 IP fuse broken		
Battery fuse broken		
Overload 3 times in 30min		
IP Neutral loss		
IP phase abnormal		
Converter Current unbalance		
Inverter Current unbalance		
Cover of maintain switch is open		
Phase auto adapt failure		
<b>Fault</b>		
Bus start failure	Beeping continuously	Yes
Bus over		
Bus under		
Bus unbalance		
Converter over current		
Inverter soft start failure		
High Inverter voltage		
Low Inverter voltage		
Inverter output short circuited		
Negative power fault		
Battery SCR short circuited		
Inverter relay short circuited		
Battery fuse broken in battery mode		
Parallel communication failure		
Parallel output current unbalance		

### Single UPS Operation

#### Turn on the UPS with utility power supply (in AC mode)

1. After power supply is connected correctly, set the breaker of the battery pack at “ON” position (the step only available for long-run model). Then set the line input breaker at “ON” position(for dual input unit, also set the bypass input breaker at “ON”). At this time the fan is running and the UPS enter to power on mode for initialization, several seconds later, UPS operates in Bypass mode and supplies power to the loads via the bypass.

**NOTE:** When UPS is in Bypass mode, the output voltage will directly power from utility after you switch on the input breaker. In Bypass mode, the load is not protected by UPS. To protect your precious devices, you

should turn on the UPS. Refer to next step.

2. Press and hold the "ON" button for 0.5s to turn on the UPS and the buzzer will beep once.
3. A few seconds later, the UPS will enter to AC mode. If the utility power is abnormal, the UPS will operate in Battery mode without interruption.

**NOTE:** When the UPS is running out battery, it will shut down automatically at Battery mode. When the utility power is restored, the UPS will auto restart in AC mode.

#### **Turn on the UPS without utility power supply (in Battery mode)**

1. Make sure that the breaker of the battery pack is at "ON" position (only for long-run model).
2. Press the "ON" button to set up the power supply for the UPS, UPS will enter to power on mode. After initialization UPS will enter to No Output mode, then Press and hold the "ON" button for 0.5s to turn on the UPS, and the buzzer will beep once.
3. A few seconds later, the UPS will be turned on and enter to Battery mode.

#### **Connect devices to UPS**

After the UPS is turned on, you can connect devices to the UPS.

1. Turn on the UPS first and then switch on the devices one by one, the LCD panel will display total load level.
2. If it is necessary to connect the inductive loads such as a printer, the in-rush current should be calculated carefully to see if it meets the capacity of the UPS, because the power consumption of this kind of loads is too big.
3. If the UPS is overload, the buzzer will beep twice every second.
4. When the UPS is overload, please remove some loads immediately. It is recommended to have the total loads connected to the UPS less than 80% of its nominal power capacity to prevent overload for system safety.
5. If the overload time is over acceptable time listed in spec at AC mode, the UPS will automatically transfer to Bypass mode. After the overload is removed, it will return to AC mode. If the overload time is over acceptable time listed in spec at Battery mode, the UPS will become fault status. At this time, if bypass is enabled, the UPS will power to the load via bypass. If bypass function is disabled or the input power is not within bypass acceptable range, it will cut off output directly.

#### **Charge the batteries**

1. After the UPS is connected to the utility power, the charger will charge the batteries automatically except in Battery mode or during battery self-test.
2. Suggest to charge batteries at least 10 hours before use. Otherwise, the backup time may be shorter than expected time.
3. Make sure the battery numbers setting on the control board is consistent to real connection.

#### **Battery mode operation**

1. When the UPS is in Battery mode, the buzzer will beep according to different battery capacity. If the battery capacity is more than 25%, the buzzer will beep once every 4 seconds; if the battery voltage drops to the alarm level, the buzzer will beep quickly (once every sec) to remind users that the battery is at low level and the UPS will shut down automatically soon. Users could switch off some non-critical loads to disable the shutdown alarm and prolong the backup time. If there is no more load to be switched off at that time, you have to shut down all loads as soon as possible to protect the devices or save data. Otherwise, there is a risk of data loss or load failure.
2. In Battery mode, if buzzer sound annoys, users can press the Mute button to disable the buzzer.
3. The backup time of the long-run model depends on the external battery capacity.
4. The backup time may vary from different environment temperature and load type.
5. When setting backup time for 16.5 hours (default value from LCD panel), after discharging 16.5 hours, UPS will shut down automatically to protect the battery. This battery discharge protection can be enabled or disabled through LCD panel control.

**Test the batteries**

1. If you need to check the battery status when the UPS is running in AC mode/CVCF mode, you could press the "Test" button to let the UPS do battery self-test.
2. Users also can set battery self-test through monitoring software.
3. If the UPS is at battery self-test, the LCD display and buzzer indication will be the same as at Battery mode except that the battery LED is flashing.

**Turn off the UPS with utility power supply in AC mode**

1. Turn off the inverter of the UPS by pressing "OFF" button for at least 0.5s, and then the buzzer will beep once. The UPS will turn into Bypass mode.

**NOTE 1:** If the UPS has been set to enable the bypass output, it will bypass voltage from utility power to output terminal even though you have turned off the UPS (inverter).

**NOTE 2:** After turning off the UPS, please be aware that the UPS is working at Bypass mode and there is risk of power loss for connected devices.

2. In Bypass mode, output voltage of the UPS is still present. In order to cut off the output, switch off the line input breaker(for dual input unit, also switch off the bypass line breaker). A few seconds later, there is no display shown on the display panel and UPS is complete off.

**Turn off the UPS without utility power supply in Battery mode**

1. Turn off the UPS by pressing "OFF" button for at least 0.5s, and then the buzzer will beep once.
2. Then UPS will cut off power to output and there is no display shown on the display panel.

**Mute the buzzer**

1. To mute the buzzer, please press the "Mute" button for at least 0.5s. If you press it again after the buzzer is muted, the buzzer will beep again.
2. Some warning alarms can't be muted unless the error is fixed.

**Operation in warning status**

1. When Fault LED flashes and the buzzer beeps once every second, it means that there are some problems for UPS operation. Users can get the warning indicator from LCD panel. Please check the trouble shooting table for details.
2. Some warning alarms can't be muted unless the error is fixed.

**Operation in Fault mode**

1. When Fault LED illuminates and the buzzer beeps continuously, it means that there is a fatal error in the UPS. Users can get the fault code from display panel. Please check the trouble shooting table for details.
2. Please check the loads, wiring, ventilation, utility, battery and so on after the fault occurs. Don't try to turn on the UPS again before solving the problems. If the problems can't be fixed, please contact the distributor or service people immediately.
3. For emergency case, please cut off the connection from utility, external battery, and output immediately to avoid more risk or danger.

**Operation of changing battery numbers**

1. This operation is only available for professional or qualified technicians.
2. Turn off the UPS. If the load couldn't be cut off, you should remove the cover of maintenance bypass switch on the rear panel and turn the maintenance switch to "BPS" position first.
3. Switch off the line input breaker (for dual input unit, also switch off the bypass input breaker), and switch off the battery breaker (only available for long-run model).
4. Remove the cabinet cover, and disconnect battery wire for standard model. Then modify the jumper of JS3 on the control board to set the battery numbers as following table.

**NOTE:** JS3 setting on the control board: please shorts the Pin1 & Pin2 for 18 pcs batteries; shorts the Pin3 & Pin4 for 19 pcs batteries; and shorts the Pin5 & Pin6 for 20 pcs batteries.

5. Modify the battery pack for the setting number carefully. After complete it, put the cover back, switch on the battery breaker for long-run model.

## **Parallel Operation**

### **Parallel system initial startup**

1. Make sure all of the UPSs are parallel models and have the same configuration. Then, follow the wiring steps.
2. Turn off the input and output breakers of each UPS, and turn off the battery breaker if the UPS is long-run model.
3. Remove the cover of parallel share current port on the UPS. Connect each UPS one by one with parallel cable and share current cable.
4. Turn on the parallel system with utility power supply (in AC mode)
  - a. Turn on the input breaker of each UPS. After all UPSs enter to bypass mode, measure the voltage difference between the output line1 of each UPS with multimeter. If the voltage difference is less than 1V, it means all connections are correct. If the difference is more than 1V, recheck if the wirings are connected correctly.
  - b. After voltage difference is measured less than 1V, turn on each UPS in turns. After a while, the UPSs will enter to AC mode synchronously. Measure the output voltage of each UPS to check if the voltage difference is less than 1.5V (typical 1V) with multimeter. If the difference is more than 1.5V, please calibrate output voltage by configuring inverter voltage (Program 15) in LCD setting. If voltage difference remains more than 1.5V, please contact your local distributor or service center for help.
  - c. Turn off each UPS in turns and after all of UPSs transfer to Bypass mode, turn on the output breaker of each UPS.
  - d. Turn on each UPS in turns, after a while, the UPSs will enter to AC mode synchronously and then the parallel system installation is complete.
5. Turn on the parallel system without utility power supply (in Battery mode)
  - a. Turn on the battery breaker (only available in long-run model) and output breaker of each UPS.  
**NOTE 1:** The output breaker of each UPS should be turned on when turning on the parallel system without utility power supply. Otherwise, the parallel system cannot be operated.  
**NOTE 2:** It's not allowed to share one battery pack for long-run UPSs in parallel system. Each UPS should be connected to its battery pack.
  - b. Turn on any one UPS. A few seconds later, the UPS will enter to battery mode.
  - c. Then turn on another UPS. A few seconds later, the UPS will enter to battery mode and add to the parallel system.
  - d. If you have the third UPS, follow the same procedure of c). Then the parallel system is complete.

### **Add one new unit into the parallel system**

1. You cannot add one new unit into the parallel system when whole system is running. You must cut off the load and shutdown the system.
2. Make sure all of the UPS are the parallel models.
3. Install the new parallel system refers to the previous section.

### **Remove one unit from the parallel system**

There are two methods to remove one unit from the parallel system:

#### First method:

1. Press the "OFF" key twice and each time should be lasted for more than 0.5s. Then, the UPS will enter into bypass mode or no output mode without output.
2. Turn off the output breaker of this unit, and then turn off the input breaker of this unit.

- After it shuts down, you can turn off the battery breaker (for long-run model) and remove the parallel and share current cables. And then remove the unit from the parallel system.


 
 

 
 

 

#### Second method:

- If the bypass is abnormal, you can not remove the UPS without interruption. You must cut off the load and shut down the system first.
- Make sure the bypass setting is enabled in each UPS and then turn off the running system. All UPSs will transfer to Bypass mode. Remove all the maintenance bypass covers and set the maintenance switches from "UPS" to "BPS". Turn off all the input breakers and battery breakers in parallel system.
- Turn off the output breaker and remove the parallel cable and share current cable of the UPS which you want to remove. Then, remove it from parallel system.
- Turn on the input breaker of the remaining UPS and the system will transfer to Bypass mode. Set the maintenance switches from "BPS" to "UPS" and put the maintenance bypass covers back.
- Turn on the remaining UPS according to the previous section.

#### Warning: (Only for the parallel system)

- Before turning on the parallel system to activate inverter, make sure that all unit's maintenance switch at the same position.
- When parallel system is turned on to work through inverter, please do not operate the maintenance switch of any unit.

#### Abbreviation Meaning in LCD Display


Abbreviation	Display content	Meaning
ENA		Enable
DIS		Disable
ATO		Auto
BAT		Battery
NCF		Normal mode (not CVCF mode)
CF		CVCF mode
SUB		Subtract
ADD		Add
ON		On



OFF		Off
FBD		Not allowed
OPN		Allow
RES		Reserved
N.L		Neutral line loss
CHE		Check
OPV		Output voltage
PAR		Parallel, 001 means the first UPS
AN		The first phase
BN		The second phase
CN		The third phase
AB		The first line
BC		The second line
CA		The third line

### LCD Setting

There are three parameters to set up the UPS. Refer to following diagram.

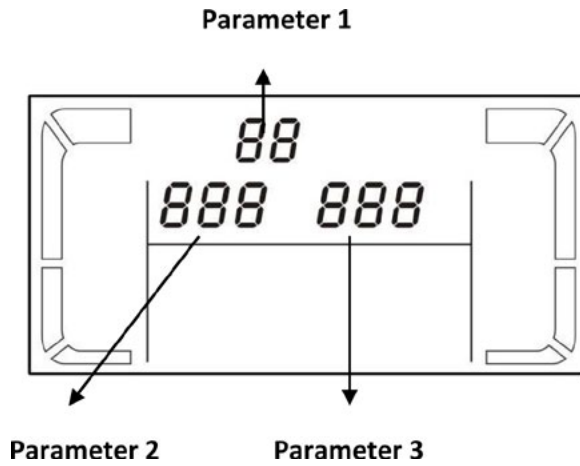

Parameter 1: It's for program alternatives. Refer to below tables for the programs to set up.

Parameter 2 and parameter 3 are the setting options or values for each program.

Note: The following order of setting code only presents when UPS is in Bypass Mode or no-output mode. The setting code number will change the numbers under other modes. For example, when the UPS is in AC mode, the total available setting becomes 7 only. Then, setting code of "Bypass mode setting" will become 01, "Battery backup time setting" will become 02, and so on.


#### 16 programs available list for parameter 1:

Code	Description	Bypass / No Output mode	AC mode	ECO mode	CVCF mode	Battery mode	Battery Test
01	Output voltage	Y*					
02	Output frequency	Y					
03	Voltage range for bypass	Y					
04	Frequency range for bypass	Y					
05	ECO mode enable/disable	Y					
06	Voltage range for ECO mode	Y					
07	ECO mode frequency range setting	Y					
08	Bypass mode setting	Y	Y				
09	Battery backup time setting	Y	Y	Y	Y	Y	Y
10	Programmable output setting	Y	Y	Y	Y	Y	Y
11	Shutdown point for programmable output	Y	Y	Y	Y	Y	Y
12	Reserved /Neutral Loss**						
13	Battery voltage adjustment	Y	Y	Y	Y	Y	Y
14	Charger voltage adjustment	Y	Y	Y	Y	Y	Y
15	Inverter voltage adjustment		Y		Y	Y	
16	Output voltage calibration		Y		Y	Y	
17	Phase auto adapt enable/disable	Y					




\*Y means that this program can be set in this mode.

\*\*It is only available to operate when a loss of neutral line is detected. Otherwise, it will display " " in program setting menu.


**01: Output voltage**

Interface	Setting
	<p><b>Parameter 3: Output voltage</b>                      You may choose the following output voltage in parameter 3:  <b>208:</b> Presents output voltage is 208Vac  <b>220:</b> Presents output voltage is 220Vac  <b>230:</b> Presents output voltage is 230Vac  <b>240:</b> Presents output voltage is 240Vac</p>


**02: Output frequency**

Interface	Setting
<p>60 Hz, CVCF mode</p> 	<p><b>Parameter 2: Output Frequency</b>                      Setting the output frequency. You may choose following three options in parameter 2:                      50.0Hz: The output frequency is setting for 50.0Hz.                      60.0Hz: The output frequency is setting for 60.0Hz.                      ATO: If selected, output frequency will be decided according to the latest normal utility frequency. If it is from 46Hz to 54Hz, the output frequency will be 50.0Hz. If it is from 56Hz to 64Hz, the output frequency will be 60.0Hz. ATO is default setting.</p>
<p>50 Hz, Normal mode</p> 	<p><b>Parameter 3: Frequency mode</b>                      Setting output frequency at CVCF mode or not CVCF mode. You may choose following two options in parameter 3:  <b>CF:</b> Setting UPS to CVCF mode. If selected, the output frequency will be fixed at 50Hz or 60Hz according to setting in parameter 2. The input frequency could be from 46Hz to 64Hz.  <b>NCF:</b> Setting UPS to normal mode (not CVCF mode). If selected, the output frequency will synchronize with the input frequency within 46~54 Hz at 50Hz or within 56~64 Hz at 60Hz according to setting in parameter 2. If 50 Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 46~54 Hz. If 60Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 56~64 Hz.</p>
<p>ATO</p> 	<p>*If Parameter 2 is ATO, the Parameter 3 will show the current frequency.</p>


**03: Voltage range for bypass**

Interface	Setting
	<p><b>Parameter 2:</b> Set the acceptable low voltage for bypass. Setting range is from 110V to 209V and the default value is 110V.  <b>Parameter 3:</b> Set the acceptable high voltage for bypass. Setting range is from 231V to 276V and the default value is 264V.</p>


**04: Frequency range for bypass**

Interface	Setting
	<p><b>Parameter 2:</b> Set the acceptable low frequency for bypass.                      50 Hz system: Setting range is from 46.0Hz to 49.0Hz.                      60 Hz system: Setting range is from 56.0Hz to 59.0Hz. The default value is 46.0Hz/56.0Hz.</p> <p><b>Parameter 3:</b> Set the acceptable high frequency for bypass.                      50 Hz: Setting range is from 51.0Hz to 54.0 Hz.                      60 Hz: Setting range is from 61.0Hz to 64.0Hz.                      The default value is 54.0Hz/64.0Hz.</p>


**05: ECO mode enable/disable**

Interface	Setting
	<p><b>Parameter 3:</b> Enable or disable ECO function. You may choose following two options:  <b>DIS:</b> disable ECO function  <b>ENA:</b> enable ECO function</p> <p>If ECO function is disabled, voltage range and frequency range for ECO mode still can be set, but it is meaningless unless the ECO function is enabled.</p>


**06: Voltage range for ECO mode**

Interface	Setting
	<p><b>Parameter 2:</b> Low voltage point in ECO mode. The setting range is from -5% to -10% of the nominal voltage.</p> <p><b>Parameter 3:</b> High voltage point in ECO mode. The setting range is from +5% to +10% of the nominal voltage.</p>


**07: Frequency range for ECO mode**

Interface	Setting
	<p><b>Parameter 2:</b> Set low voltage point for ECO mode.                      50 Hz system: Setting range is from 46.0Hz to 48.0Hz.                      60 Hz system: Setting range is from 56.0Hz to 58.0Hz. The default value is 48.0Hz/58.0Hz.</p> <p><b>Parameter 3:</b> Set high voltage point for ECO mode.                      50 Hz: Setting range is from 52.0Hz to 54.0 Hz.                      60 Hz: Setting range is from 62.0Hz to 64.0Hz.                      The default value is 52.0Hz/62.0Hz.</p>


**08: Bypass mode setting**

Interface	Setting
	<p><b>Parameter 2:</b>  <b>OPN:</b> Bypass allowed. When selected, UPS will run at Bypass mode depending on bypass enabled/disabled setting.  <b>FBD:</b> Bypass not allowed. When selected, it's not allowed for running in Bypass mode under any situations.</p> <p><b>Parameter 3:</b>  <b>ENA:</b> Bypass enabled. When selected, Bypass mode is activated.  <b>DIS:</b> Bypass disabled. When selected, automatic bypass is acceptable, but manual bypass is not allowed. Manual bypass means users manually operate UPS for Bypass mode. For example, pressing OFF button in AC mode to turn into Bypass mode.</p>



**09: Battery backup time setting**

Interface	Setting
	<p><b>Parameter 3:</b>  <b>000~999:</b> Set the maximum discharge time from 0 min to 999 min. UPS will shut down to protect battery if the discharge time arrives before the battery is under voltage. The default value is 990 min.  <b>DIS:</b> Disable battery discharge protection and backup time will depend on battery capacity.</p>

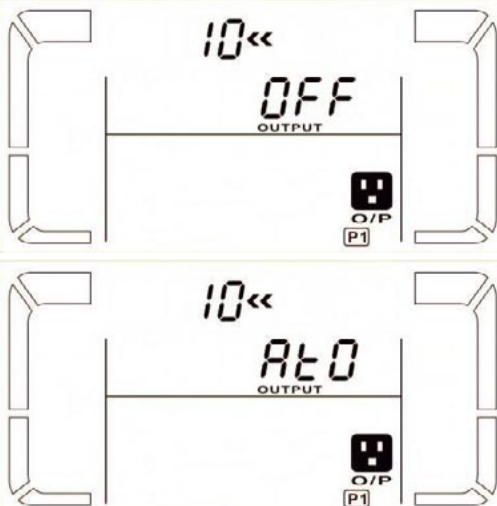

**10: Programmable output setting**

Interface	Setting
	<p><b>Parameter 3:</b> Set programmable output. You may choose the following three options:  <b>ON:</b> Programmable output is manually switched on timelessly.  <b>OFF:</b> Programmable output is manually switched off. However, if UPS restarts, this setting will automatically go to "ATO" status.  <b>ATO:</b> Programmable output is automatically turned on or cut off according to battery or load status. When the battery voltage is lower than the setting point, or shutdown time arrives, the programmable output will be cut off automatically. After the utility is recovering, the output will turn on automatically. If overload happens, the programmable output also will be cut off automatically. If it happens 3 times, the programmable output will be cut off until it is manually switched on.</p>


**11: Shutdown point for programmable output**

Interface	Setting
	<p><b>Parameter 2:</b> 001. Set shutdown time for programmable output.</p> <p><b>Parameter 3:</b> Shutdown time in minutes. Setting range is from 0 to 300. When shutdown time arrives, the programmable output terminal will be cut off. The default value is 30 minutes.</p>
	<p><b>Parameter 2:</b> 002 Set shutdown voltage for programmable output.</p> <p><b>Parameter 3:</b> Shutdown voltage in V. Setting range is from 11.2 to 13.6. If the battery voltage is less than the setting point, the programmable output will be cut off. The default value is 11.2V.</p>


**12: Reserved/Neutral Line Loss**

Interface	Setting
	<p>When input neutral line is correctly detected, "RES" will be displayed in parameter 2 and parameter 3.</p>
	<p>When a loss of input Neutral line is detected, this program will become "input Neutral line detecting" menu. It will display "NL" in parameter 2 and "CHE" in parameter 3. When it occurs, please reconnect the input Neutral line well. Then, press the "Enter" key to activate input Neutral line detecting. If it's connected well and correctly detected, it will show "RES" in parameter 2 and parameter 3 when entering the setting menu next time.</p>


**13: Battery voltage calibration**

Interface	Setting
	<p><b>Parameter 2:</b> Select "Add" or "Sub" function to adjust battery voltage to real figure.</p> <p><b>Parameter 3:</b> the voltage range is from 0V to 9.9V and the default value is 0V.</p>


**14: Charger voltage adjustment**

Interface	Setting
	<p><b>Parameter 2:</b> you may choose Add or Sub to adjust charger voltage  <b>Parameter 3:</b> the voltage range is from 0V to 9.9V and the default value is 0V.  <b>NOTE:</b>* Before making voltage adjustment, be sure to disconnect all batteries first to get the accurate charger voltage.                  * Any modification should be suitable to battery specifications.</p>


**15: Inverter voltage adjustment**

Interface	Setting
	<p><b>Parameter 2:</b> you may choose <b>Add</b> or <b>Sub</b> to adjust inverter A voltage.  <b>Parameter 3:</b> the voltage range is from 0V to 9.9V and the default value is 0V.</p>

**16: Output voltage calibration**

Interface	Setting
	<p><b>Parameter 2:</b> it always shows OPV as output voltage.  <b>Parameter 3:</b> it shows the internal measurement value of the output voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p>


**17: Phase auto adapt enable/disable**

Interface	Setting
	<p><b>Parameter 2:</b> it always shows PH.A as phase auto adapt function.  <b>Parameter 3:</b> Enable or disable phase auto adapt function. You may choose following two options:  <b>DIS:</b> disable phase auto adapt function. Then, the UPS only can accept the phase order which L2 delay L1 120°, L3 delay L2 120°. <b>ENA:</b> enable phase auto adapt function. Then, the UPS can accept either inputs of L1, L2, L3 in the same phase or the phase order which L2 delay L1 120°, L3 delay L2 120° or L2 delay L1 240°, L3 delay L2 240°.</p>

### Operating Mode/Status Description

Following table shows LCD display for operating modes and status.


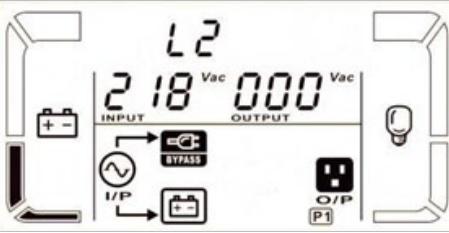

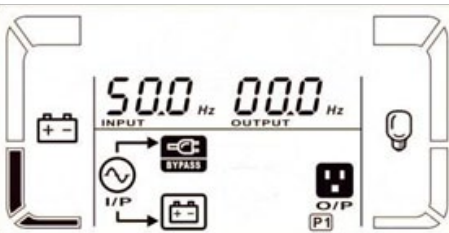



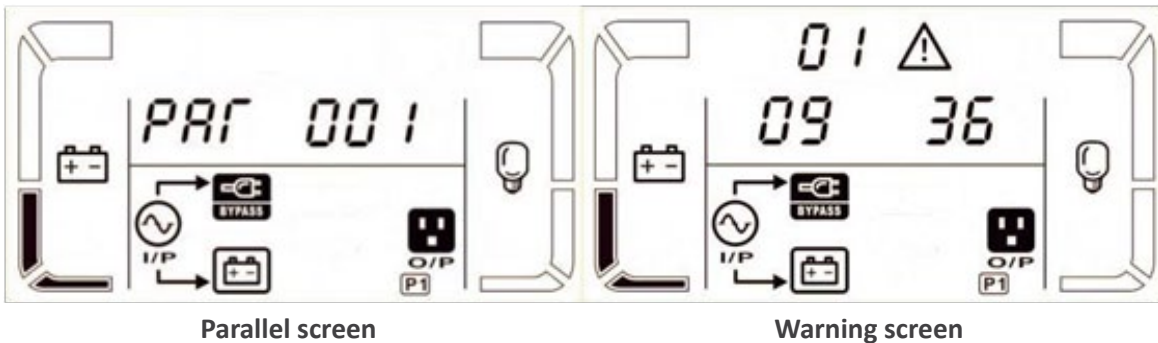

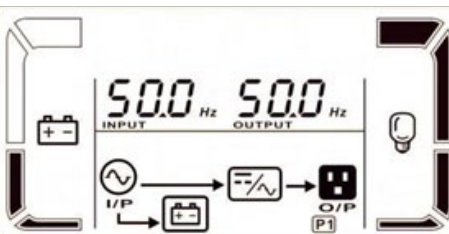
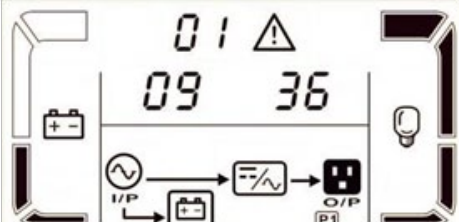

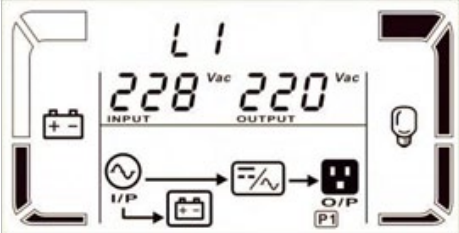
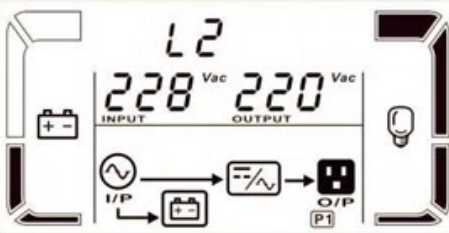

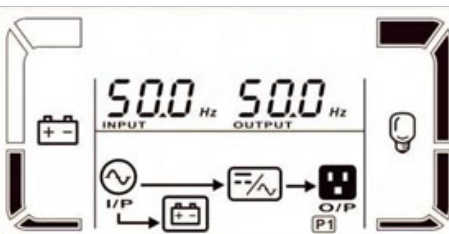
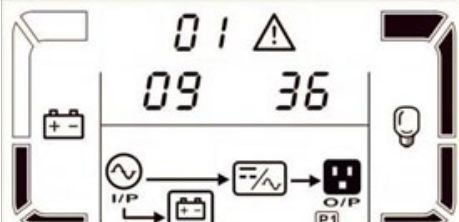

1. If the UPS is in normal operation, it will show seven screens one by one, which represents 3 phase input voltages (An, bn, Cn), 3 line input voltages (Ab, bC, CA) and frequency in turns.
2. If parallel UPS systems are successfully set up, it will show one more screen with "PAR" in parameter 2 and assigned number in parameter 3 as below parallel screen diagram. The master UPS will be default assigned as "001" and slave UPSs will be assigned as either "002" or "003". The assigned numbers may be changed dynamically in the operation;








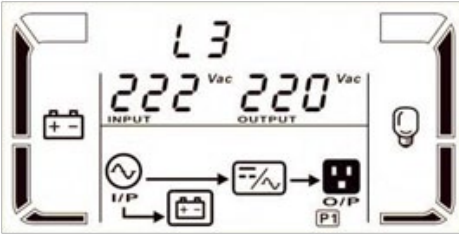
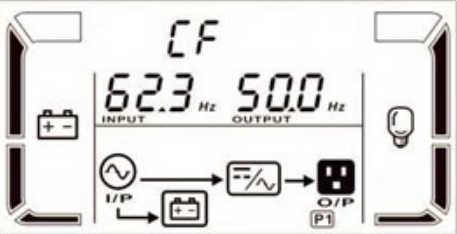
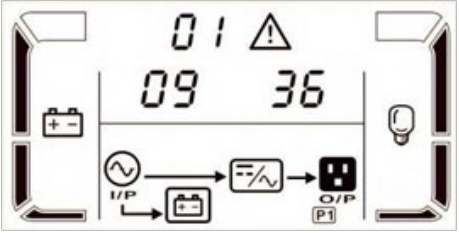
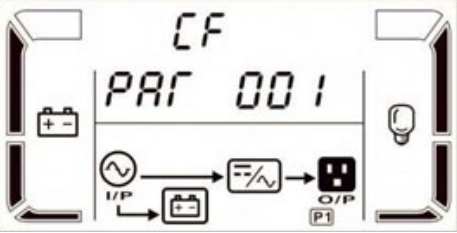


3. If some errors occur in the UPS, it will show one more screen to represent the warning situation. In the warning screen, it can show up to 3 error codes and each code indicates one error. You can find the meanings of error codes in the warning code table.





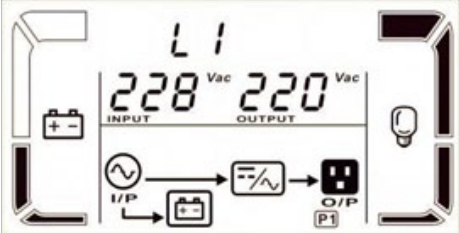
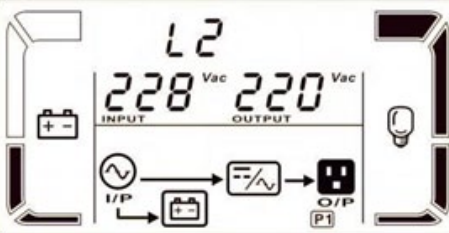


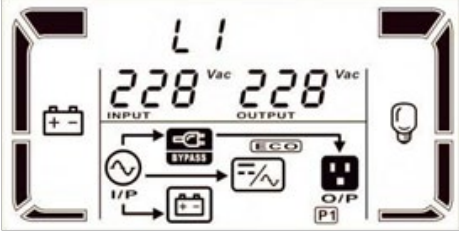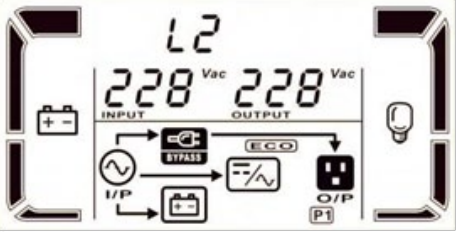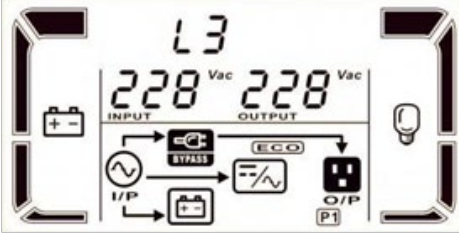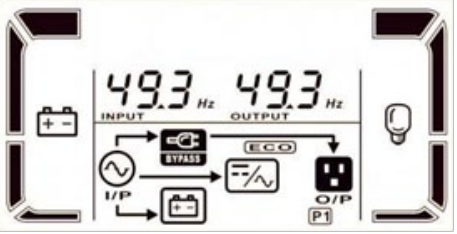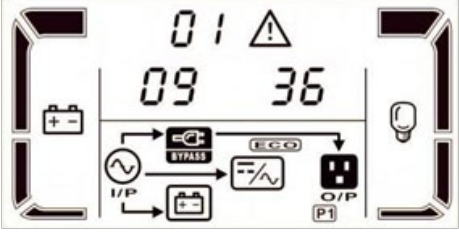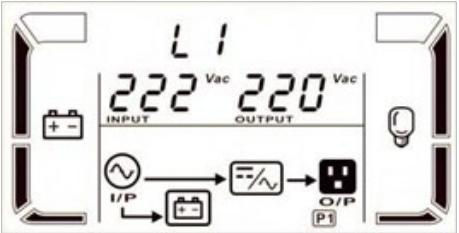Operating mode/status		
UPS Power On	Description	When UPS is powered on, it will enter into this mode for a few seconds as initializing the CPU and system.
	LCD display	





<p>No-output mode</p>	<p>Description</p>	<p>When L1 is out of acceptable range or bypass is disabled (or forbidden), UPS will enter into no-output mode if powering on or turning off the UPS. It means the UPS has no output. Alarm beeps every two minutes.</p>		
	<p>LCD display</p>			
				
				
		<p>Description</p>	<p>When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery at AC mode.</p>	
		<p>LCD display</p>		
				
				
<p>AC mode</p>	<p>When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery at AC mode.</p>			
				
				
				
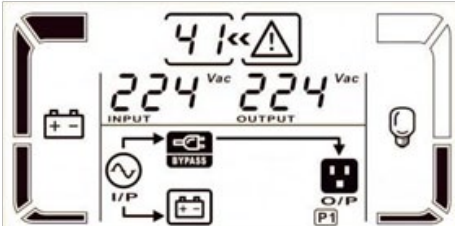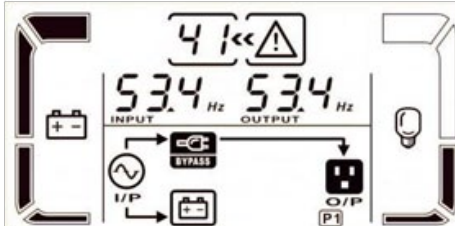
<p>ECO mode</p>	<p>Description</p>	<p>When the input voltage is within voltage regulation range and ECO mode is enabled, UPS will bypass voltage to output for energy saving.</p>	
	<p>LCD display</p>		
			
			
<p>CVCF mode</p>	<p>Description</p>	<p>When the output frequency is set to "CF", the inverter will output constant frequency (50 Hz or 60 Hz). At this mode, the UPS will have no bypass output but still charge battery.</p>	
	<p>LCD display</p>		
			
			








<p>Battery mode</p>	<p>Description</p>	<p>When the input voltage/frequency is beyond the acceptable range or power failure, UPS will backup power from battery and alarm will beep every 4 seconds.</p>	
	<p>LCD display</p>		
<p>Bypass mode</p>	<p>Description</p>	<p>When input voltage is within acceptable range and bypass is enabled, turn off the UPS and it will enter Bypass mode. Alarm beeps every two minutes.</p>	
	<p>LCD display</p>		



Battery Test	Description	<p>When UPS is in AC mode or CVCF mode, press "Test" key for more than 0.5s. Then, the UPS will beep once and start "Battery Test". The line between I/P and inverter icons will blink to remind users. This operation is used to check the battery status.</p>	
	LCD display		
Fault status	Description	<p>When UPS has fault happened, it will display fault messages in LCD panel.</p>	
	LCD display		
			
			

**Fault Code**

Fault code	Fault event	Icon	Fault code	Fault event	Icon
01	Bus start failure	None	1A	Negative power fault	None
02	Bus over	None	21	Battery SCR short circuited	None
03	Bus under	None	24	Inverter relay short circuited	None
04	Bus unbalance	None	29	Battery fuse broken in Battery mode	None
06	Converter over current	None	31	Parallel communication failure	None
11	Inverter soft start failure	None	36	Parallel output current unbalance	None
12	High inverter voltage	None	41	Over temperature	None
13	Low inverter voltage	None	43	Overload	
14	Inverter output short circuited		46	UPS model abnormal	None

**Warning Indicator**

Warning	Icon (flashing)	Alarm
Battery low		Beeping every second
Overload		Beeping twice every second
Battery unconnected		Beeping every second
Over charge		Beeping every second
EPO enable		Beeping every second
Fan failure/Over temperature		Beeping every second
Charger failure		Beeping every second





I/P fuse broken		Beeping every second
Overload 3 times in 30min		Beeping every second


 
 
 


**Warning Code**

Warning code	Warning event	Warning code	Warning event
01	Battery unconnected	10	L1 IP fuse broken
02	IP Neutral loss	21	Line loss situation is different in parallel system
04	IP phase abnormal	22	Bypass loss situation is different in parallel system
07	Over charge	33	Locked in bypass after overload 3 times in 30min
08	Low battery	34	Converter current unbalance
09	Overload	35	Battery fuse broken
0A	Fan failure	36	Inverter inter-current unbalance
0B	EPO enable	3A	Cover of maintain switch is open
0D	Over temperature	3B	Phase auto adapt failure
0E	Charger failure		

**Troubleshooting**

If the UPS system does not operate correctly, please solve the problem by using the table below.

Symptom	Possible cause	Remedy
No indication and alarm in the front display panel even though the mains is normal.	The AC input power is not connected well.	Check if input cable firmly connected to the mains.
The icon  and the warning code  flash on LCD display and alarm beeps every second.	EPO function is enabled.	Set the circuit in closed position to disable EPO function.
The icon  and  flash on LCD display and alarm beeps every second.	The external or internal battery is incorrectly connected.	Check if all batteries are connected well.

<p>The icon  and  flash on LCD display and alarm beeps twice every second.</p>	<p>UPS is overload.</p>	<p>Remove excess loads from UPS output.</p>
	<p>UPS is overloaded. Devices connected to the UPS are fed directly by the electrical network via the Bypass.</p>	<p>Remove excess loads from UPS output.</p>
	<p>After repetitive overloads, the UPS is locked in the Bypass mode. Connected devices are fed directly by the mains.</p>	<p>Remove excess loads from UPS output first. Then shut down the UPS and restart it.</p>
<p>Fault code is shown as 43. The icon  lights on LCD display and alarm beeps continuously.</p>	<p>UPS is overload too long and becomes fault. Then UPS shut down automatically.</p>	<p>Remove excess loads from UPS output and restart it.</p>
<p>Fault code is shown as 14, the icon  lights on LCD display, and alarm beeps continuously.</p>	<p>The UPS shut down automatically because short circuit occurs on the UPS output.</p>	<p>Check output wiring and if connected devices are in short circuit status.</p>
<p>Fault code is shown as 1, 2, 3, 4, 6, 11, 12, 13, 1A, 21, 24, 29, 35, 36, 41 or 46 on LCD display and alarm beeps continuously.</p>	<p>A UPS internal fault has occurred. There are two possible results:</p> <ol style="list-style-type: none"> <li>1. The load is still supplied, but directly from AC power via bypass.</li> <li>2. The load is no longer supplied by power.</li> </ol>	<p>Contact your dealer</p>
<p>Battery backup time is shorter than nominal value</p>	<p>Batteries are not fully charged</p>	<p>Charge the batteries for at least 7 hours and then check capacity. If the problem still persists, consult your dealer.</p>
	<p>Batteries defect</p>	<p>Contact your dealer to replace the battery.</p>
<p>The icon  and  flash on LCD display and alarm beeps every second.</p>	<p>Fan is locked or not working; or the UPS temperature is too high.</p>	<p>Check fans and notify dealer.</p>

## Storage and Maintenance

### Storage

Before storing, charge the UPS at least 7 hours. Store the UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:

Storage Temperature	Recharge Frequency	Charging Duration
-25°C - 40°C	Every 3 months	1-2 hours
40°C - 45°C	Every 2 months	1-2 hours

### Maintenance

- The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.
- Even after the unit is disconnected from the mains, components inside the UPS system are still connected to the battery packs which are potentially dangerous.
- Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high capability capacitor such as BUS-capacitors.
- Only persons are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.
- Verify that no voltage between the battery terminals and the ground is present before maintenance or repair. In this product, the battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground.
- Batteries may cause electric shock and have a high short-circuit current. Please remove all wristwatches, rings and other metal personal objects before maintenance or repair, and only use tools with insulated grips and handles for maintaining or repairing.
- When replace the batteries, install the same number and same type of batteries.
- Do not attempt to dispose of batteries by burning them. This could cause battery explosion. The batteries must be rightly deposited according to local regulation.
- Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.
- Please replace the fuse only with the same type and amperage in order to avoid fire hazards.
- Do not disassemble the UPS system.



## Specifications

MODEL NUMBER		NXTi-10K 3-1	NXTi-10KL 3-1
INPUT	Capacity	10kVA (8kW)	
	Voltage	400/415VAC	
	Frequency	50/60Hz ± 4Hz	
	Power factor	≥ 0.99	
	Harmonic distortion	≤ 5% THD non-linear load	
OUTPUT	Rated voltage	208/220/230/240VAC	
	Power factor	0.8	
	Frequency	50/60Hz ± 4Hz	
	Crest factor	3:1	
	Overload capacity	110% for 10 min; 130% for 1 min; > 130% for 1 sec	
	Efficiency	98% ECO mode, 90% online mode	
BATTERY	Battery type	(20) 12V 9AH	N/A
	Battery quantity and size	1A	4A
PHYSICAL	Input/output	Hardwire	
	UPS dimensions (W x D x H)	250 x 592 x 576 mm (9.8 x 23.3 x 22.7 in)	
	UPS weight	83 kg (183 lbs)	28 kg (60 lbs)
	EBP dimensions (W x D x H)	250 x 592 x 576 mm (9.8 x 23.3 x 22.7 in)	
	EBP weight	125 kg (276 lbs)	
ENVIRONMENT	Temperature	0–40°C (32–104°F)	
	Humidity	0–95% non-condensing	
	Audible noise	< 58dBA	
	Altitude	3,500 m (11,500 ft) above sea level	
APPROVALS	CE, EN/IEC 62040-2, EN/IEC 62040-1-1, RoHS compliant		
COMMUNICATIONS INTERFACE	RS232, USB, intelligent slot for optional Web/SNMP, AS400/dry contact, and Modbus cards		
INCLUDED IN BOX	User manual, monitoring software, CD, USB cable		
AVAILABLE OPTIONS	Extended warranty, maintenance bypass		