


P90L-10K interconnection with the P90L-ISO10MB

Connect 3 wire Anderson connectors to UPS input and output.
Note the UPS input and output ground is shared.



See photo below for attached Anderson connectors

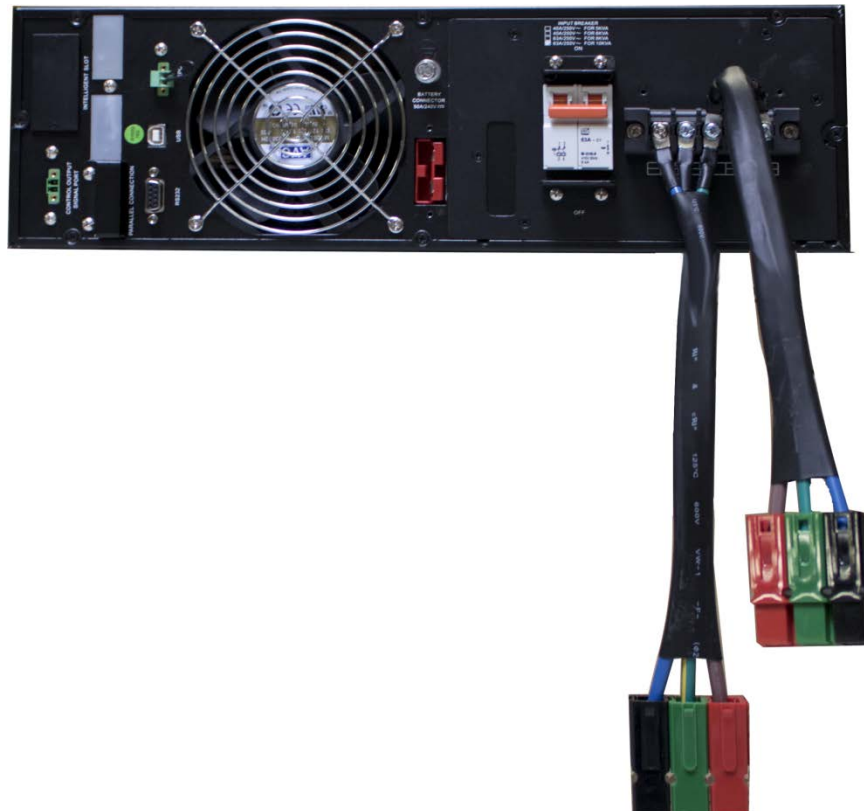

Connect 3 wire Anderson connectors to utility input terminal block and terminal block marked "TO UPS OUTPUT".



See photo below for attached Anderson connectors



Connect UPS input to utility input terminals on P90L-ISO10MB terminal block with the provided Anderson connectors.

Connect UPS output to terminal block on P90L-ISO10MB marked "TO UPS OUTPUT" with the provided Anderson connectors.

